 
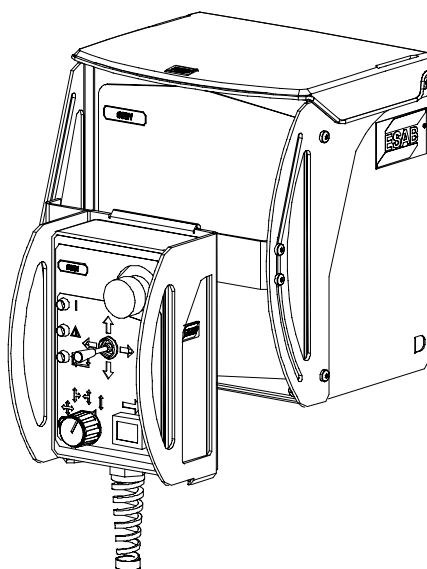 
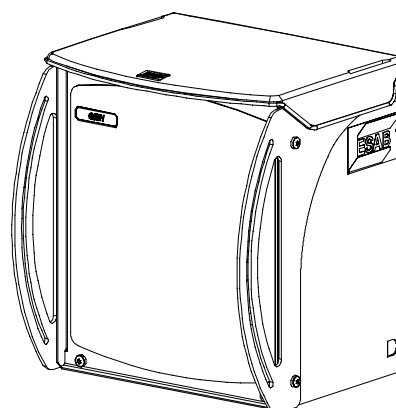 


GMH

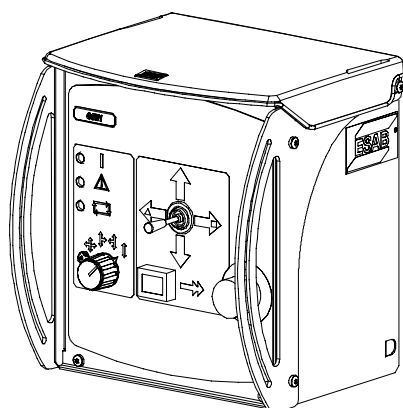

Bruksanvisning
 Brugsanvisning
 Bruksanvisning
 Käyttöohjeet
 Instruction manual
 Betriebsanweisung
 Manuel d'instructions
 Gebruiksaanwijzing
 Istrucciones de uso
 Istruzioni per l'uso

Manual de instruções
 Οδηγίες χρήσεως
 Instrukcja obsługi
 Kezelési utasítások
 Návod k používání
 Navod na pouitje
 Lietošanas pamācība
 Eksploataavimo instrukcijos
 Priručnik s uputama
 Manualul de instrucțiuni

SVENSKA	5
DANSK	25
NORSK	45
SUOMI	65
ENGLISH	85
DEUTSCH	105
FRANÇAIS	125
NEDERLANDS	145
ESPAÑOL	165
ITALIANO	185
PORTUGUÊS	205
ΕΛΛΗΝΙΚΑ	225
POLSKI	245
MAGYAR	265
ČESKY	285
SLOVENSKY	305
LATVIEŠU	325
LIETUVIŲK	345
HRVATSKI	365
Rumanian	385

Rätt till ändring av specifikationer utan avisering förbehålles.
 Ret til ændring af specifikationer uden varsel forbeholdes.
 Rett til å endre spesifikasjoner uten varsel forbeholdes.
 Oikeudet muutoksiin pidätetään.
 Rights reserved to alter specifications without notice.
 Änderungen vorbehalten.
 Sous réserve de modifications sans avis préalable.
 Recht op wijzigingen zonder voorafgaande mededeling voorbehouden.
 Reservado el derecho de cambiar las especificaciones sin previo aviso.
 Ci riserviamo il diritto di variare le specifiche senza preavviso.
 Reservamo-nos o direito de alterar as especificações sem aviso prévio.
 Διατηρείται το δικαίωμα τροποποίησης προδιαγραφών χωρίς προειδοποίηση.
 Zastrzegamy sobie prawo do wprowadzenia zmian.
 Fenntartjuk az előzetes bejelentés nélküli változtatás jogát.
 Výrobce si vyhradzuje právo na změnu údajů bez předcházejícího upozornění.
 Výrobca si vyhradzuje právo na uskutočnenie zmien bez upovedomenia.
 Tiek paturētas tiesības bez iepriekšēja brīdinājuma izmainīt specifikācijas.
 Įmonė pasilieka teisę keisti specifikacijas be įspėjimo.
 Rights reserved to alter specifications without notice.
 Rights reserved to alter specifications without notice.

Enheten är provad av ESAB i en allmän inkoppling.
Ansvaret för den slutliga inkopplingens säkerhet och funktion åligger Intergratören.

Enheden er testet af ESAB i en generel forbindelse.
Ansvaret for den endelige forbindelses sikkerhed og funktion påhviler integratoren.

Enheten er testet av ESAB i en generell tilkobling. Den som integrerer systemet, har ansvaret for sikkerheten og funksjonen ved den endelige tilkoblingen.

ESAB on koekäyttänyt yksikön yleisessä sähköliitännässä.
Vastuu lopullisen kytkennän turvallisuudesta ja toimimisesta on integraattorilla.

The unit is tested by ESAB in a general purpose operation.
Responsibility for the safety and function of the final operation remains with the Integrator.

Die Einheit wurde von ESAB in einer allgemeinen Schaltung geprüft.
Die Verantwortung für die Sicherheit und Funktion der letztendlichen Schaltung liegt beim Integrator.

L'unité est testée par ESAB sur un raccordement général.
L'Intégrateur est le seul responsable de la sécurité et du fonctionnement du raccordement définitif.

De eenheid werd door ESAB getest in een algemene schakeling.
Diegene die de uiteindelijke schakeling uitvoert is aansprakelijk voor de veiligheid en werking ervan.

La unidad ha sido probada por ESAB en una conexión general.
La seguridad y la funcionalidad de la conexión final son responsabilidad del Integrador.

L'unità è stata testata da ESAB in un impianto generico.
La sicurezza e il funzionamento dell'impianto finale sono di responsabilità dell'installatore.

A unidade foi testada pela ESAB numa ligação de carácter geral.
O integrador é responsável pela segurança da ligação final e pelo funcionamento.

Η μονάδα είναι δοκιμασμένη από την ESAB σε με κοινή σύνδεση.
Η ευθύνη για την ασφάλεια και λειτουργία της τελικής σύνδεσης είναι του ολοκληρωτή.

Jednostka została przetestowana przez firmę ESAB dla ogólnej konfiguracji podłączenia.
Za bezpieczeństwo i działanie końcowej konfiguracji podłączenia odpowiada Wykonawca.

Az egység az ESAB cégnél egy általános célú művelet során kipróbálásra került.
A végső működés során a biztonságért és a működésért az integrátor felel.

Společnost ESAB jednotku testuje v obecném provozu.
Odpovědnost za bezpečnost a funkčnost konečného provozu nese osoba, která provedla zabudování.

Jednotka je testovaná vo všeobecnej prevádzke spoločnosťou ESAB.
Za bezpečnosť a funkčnosť konečnej prevádzky stále zodpovedá integrátor.

Iekārta ir ESAB pārbaudīta vispusīgas ekspluatācijas apstākļos.
Par galaizmantošanas drošību un darbību atbildīgs ir integrators.

 
Įrenginio veikimas naudojant jį pagal benrają paskirtį patikrintas ESAB.
Už įrenginio galutinio veikimo saugą ir funkcijas atsako įrangos montuotojas.

ESAB je testirao jedinicu u operaciji opće namjene.
Odgovornost za sigurnost i funkciju završne operacije ostaje na Integratoru.


Unitatea este testată de ESAB în timpul funcționării în scop general.
Responsabilitatea pentru siguranță și funcționarea finală este a Integratorului.

GMH with portable control box




GMH

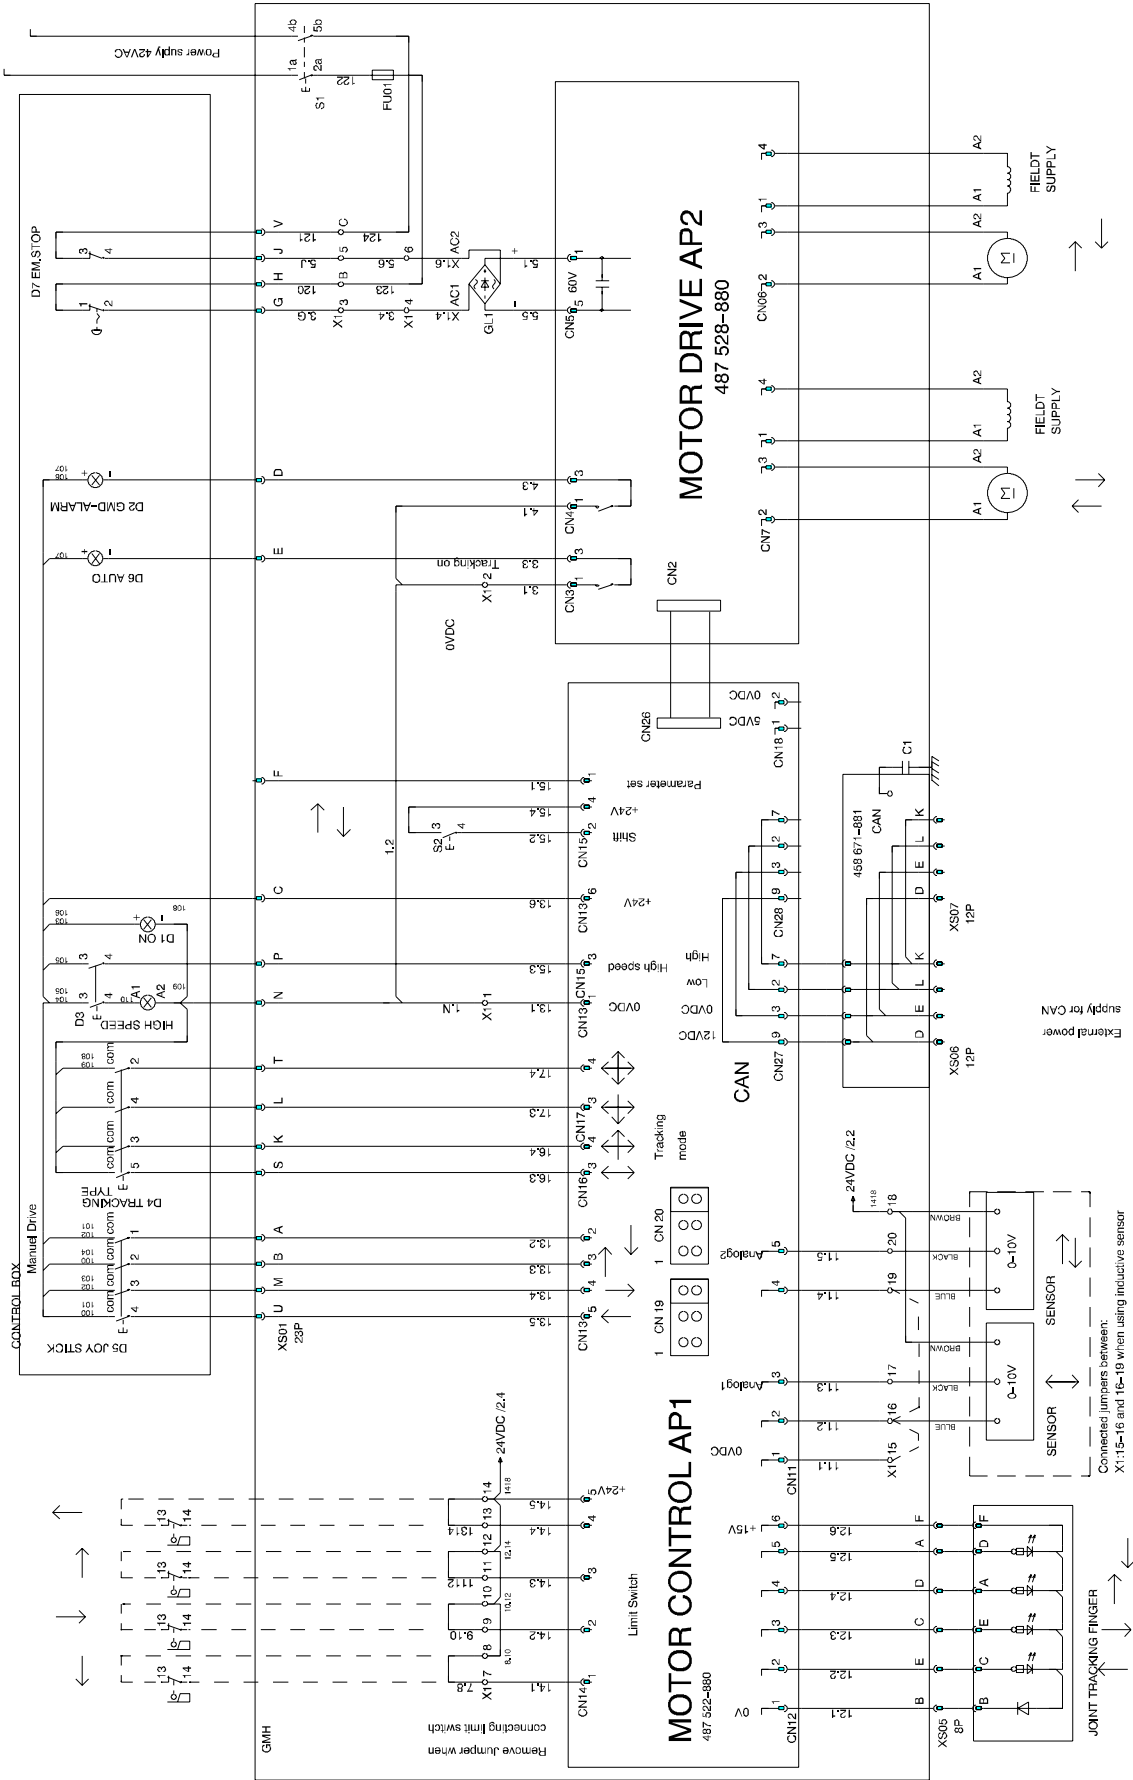



- 407 -

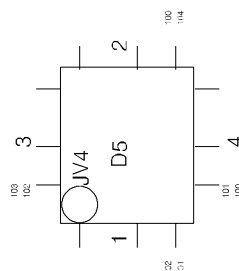 

     MÅTTSSKISS MÅLSKITSE MÅLSKISSE MITTAPIIRUSTUS DIMENSION
 DRAWING MASSBILD COTES D'ENCOMBREMENT MAATSCHETS CRO-
 QUIS ACOTADO DIMENSIONI ESBOÇO COM DIMENSÕES
 ΣΧΕΔΙΑΓΡΑΜΜΑ ΜΕΓΕΘΩΝ RYSUNEK WYMIAROWANYMÉRETEZETT RAJZ
 ROZMĚROVÝ VÝKRES ROZMEROVÝ VÝKRES REZERVES DAŁU SARAKSTS
 MATMENŲ BRĖŽINYS KOTIRANE NACRTE DESEN DIMENSIONAL

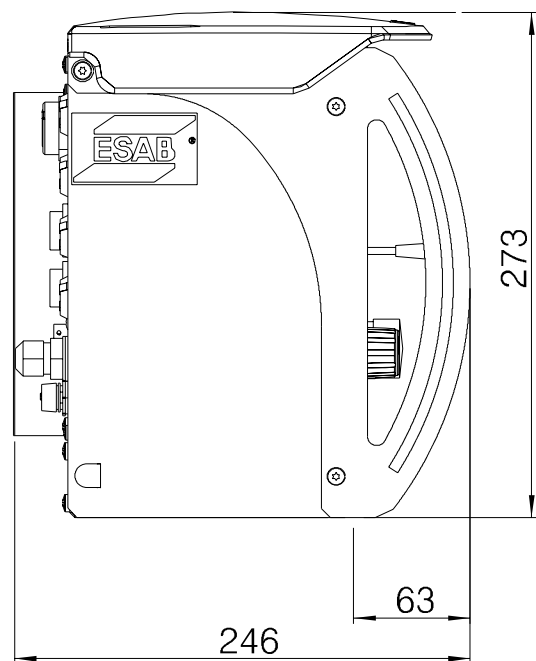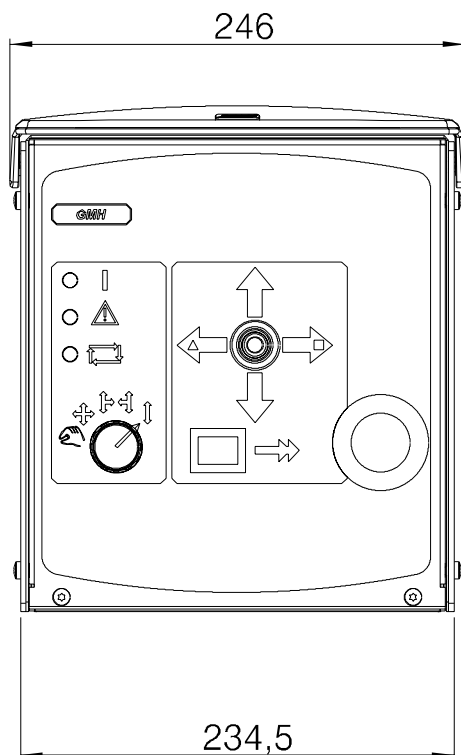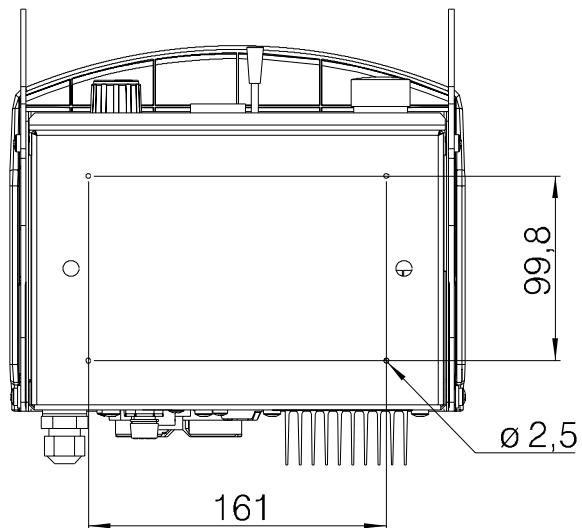

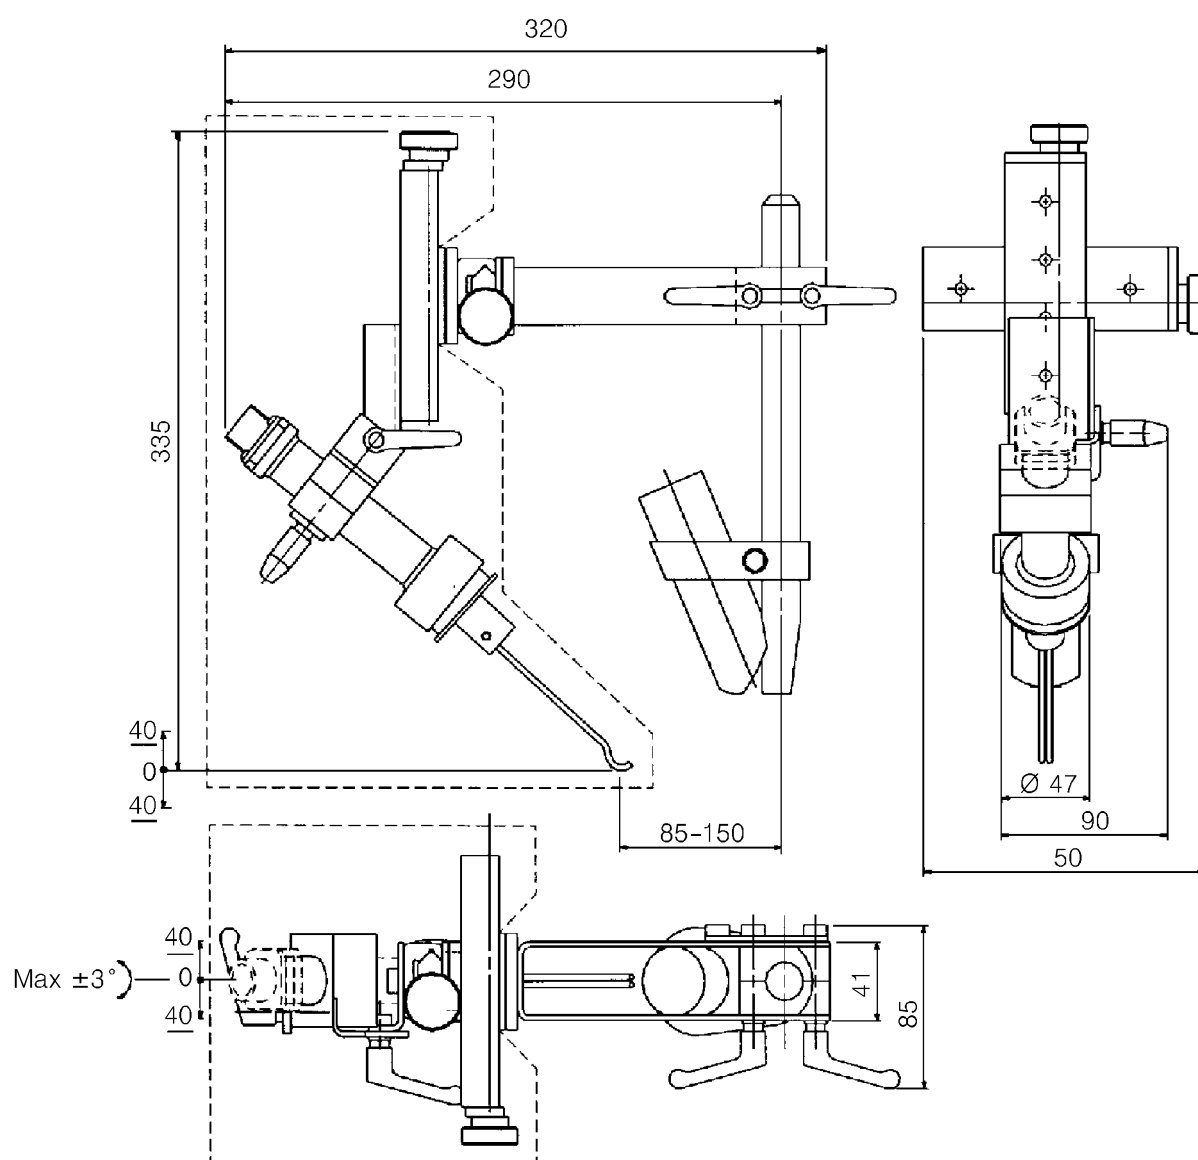


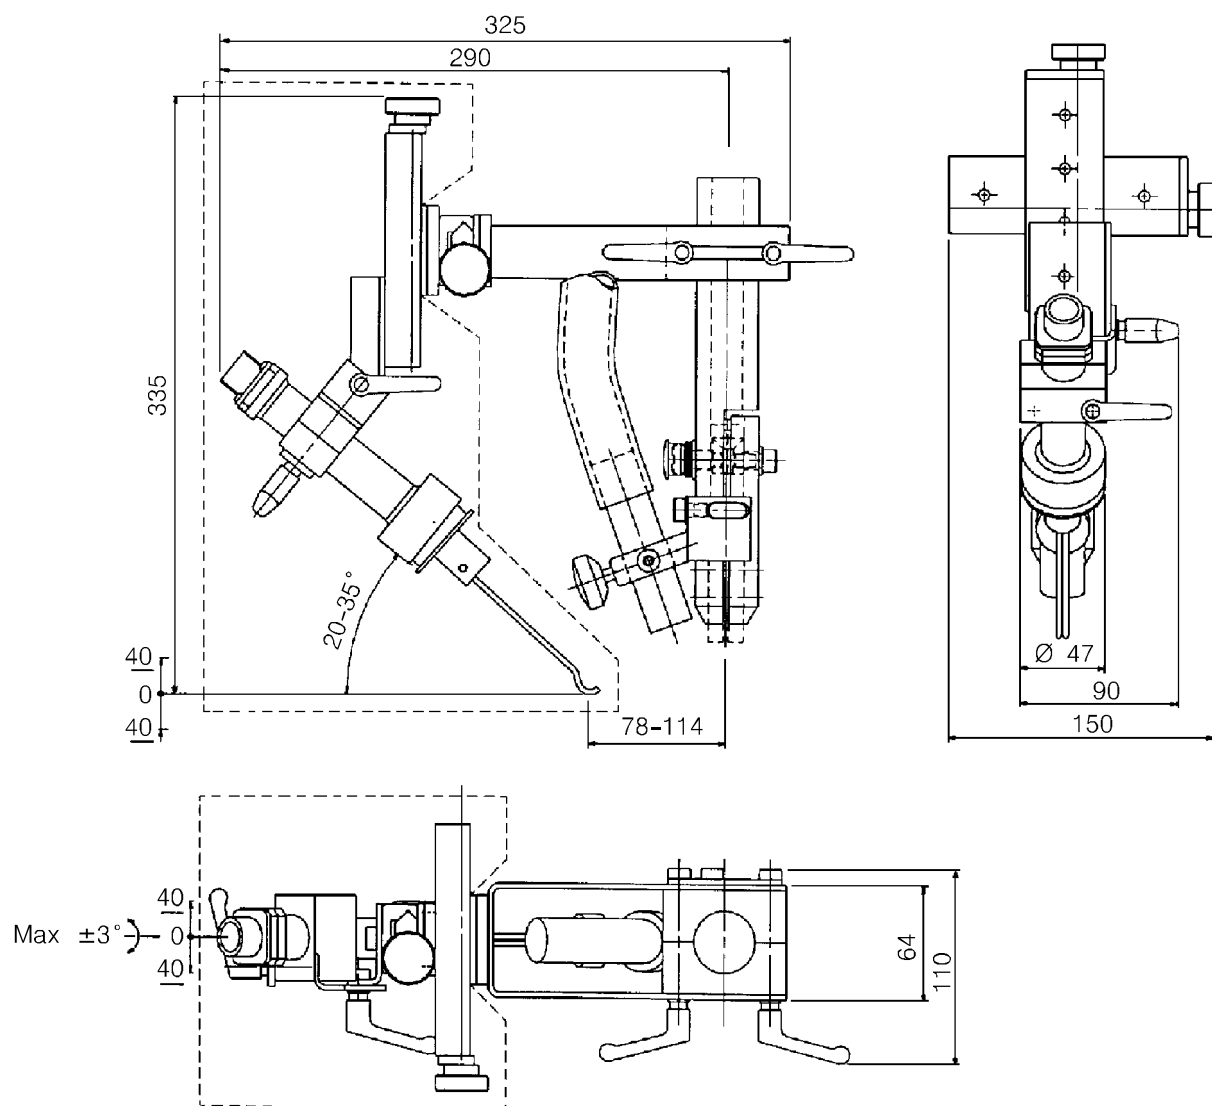

RESERVDELSFÖRTECKNING RESERVDELSFORTEGNELSE
 RESERVDELSLISTE VARAOSALUETTELO SPARE PARTS LIST ERSATZ-
 TEILLISTE LISTE DE PIÈCES DÉTACHÉES RESERVEONDERDELENLIJST
 LISTA DE REPUESTOS ELENCO RICAMBI LISTA DE PEÇAS SOBRESSALEN-
 TES ΠΙΝΑΚΑΣ ΑΝΤΑΛΛΑΚΤΙΚΩΝ ΜΕΡΩΝ SPIS CZĘŚCI ZAPASOWYCH
 TARTALÉKALKATRÉSZLISTA SEZNAM NÁHRADNÍCH DÍLŮ ZOZNAM
 NÁHRADNÝCH DIELOV REZERVES DAĻU SĀRAKSTS ATSARGINIŲ DALIŲ
 SĄRAŠAS POPIS PRIÉUVNIH LISTA DE PIESE DE SCHIMB


GMH

 Edition 2008-11-03

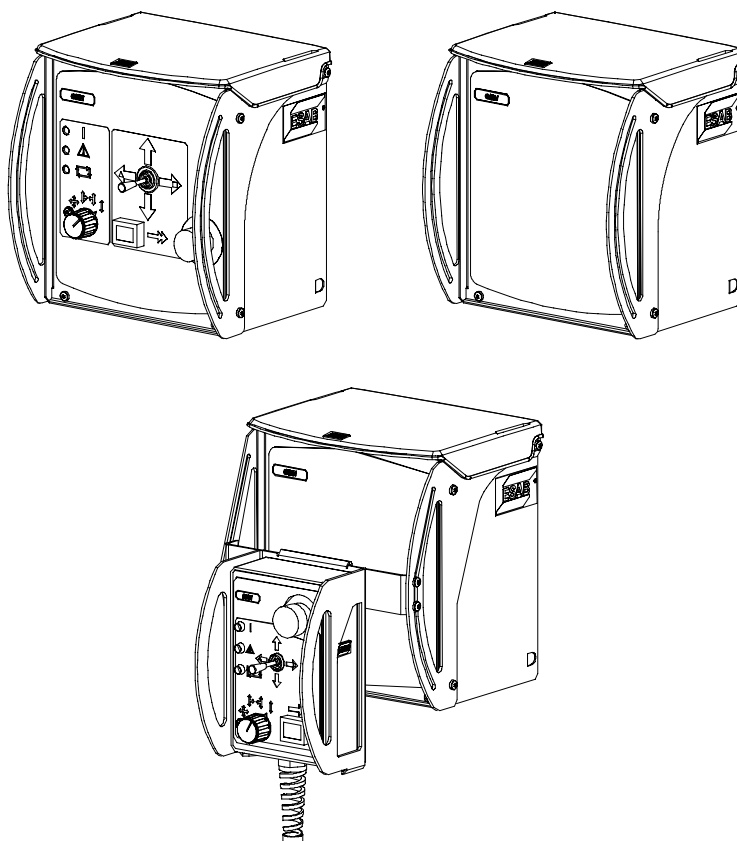


Ordering no.	Denomination	Notes
0460503880	GMH Complete	Joint tracking unit without control panel
0460503881	GMH with MMC Complete	Joint tracking unit with control panel
0460698880	GMH with portable control box	Joint tracking unit without control panel and with portable control box
0460570880	Portable control box	
0416688880	Sensor	
0416739880	Slide cross for sensor	


Item no.	Qty	Ordering no.	Denomination	Notes
		0460503880	GMH	Without control panel
1	1	0460468880	Basic module	
2	1	0460470882	Outlet module, GMH portable control	
3	1	0460462880	MMC without controls	
4	7	0194292020	Grommet	Ø20
5	4		Screw MRT, ground-cutter (black)	M5x12
6	2		Screw MRT (black)	M5x16
7	4		Screw MRT (black)	M5x16
12	1	0460673880	Supply cable	L = 5m

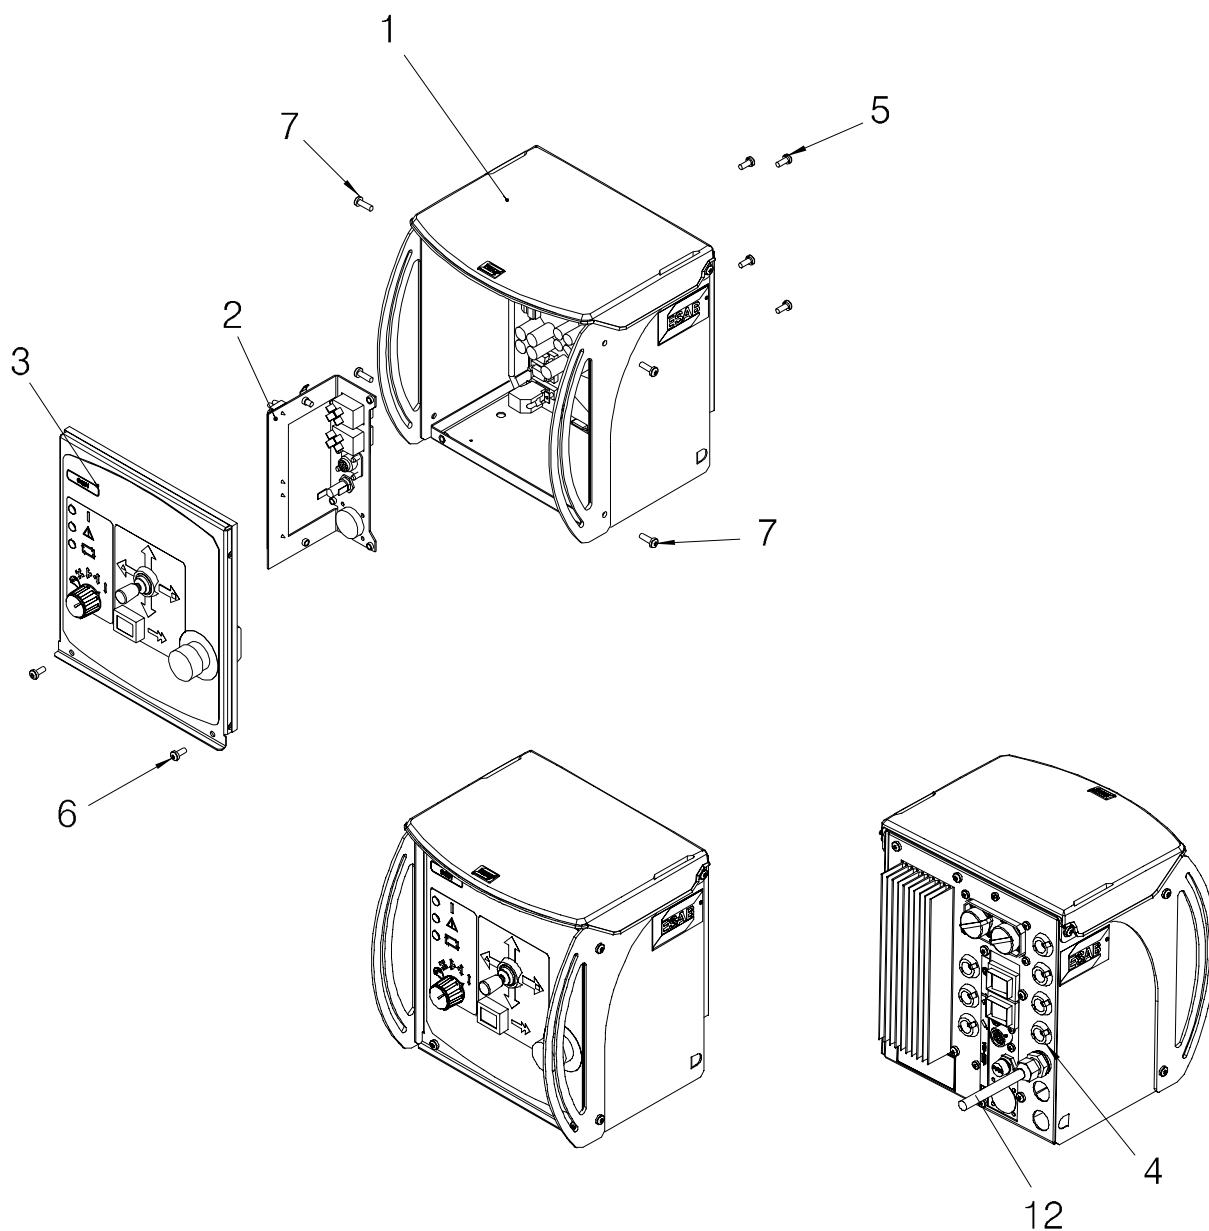 


Item no.	Qty	Ordering no.	Denomination	Notes
		0460503881	GMH with MMC	With control panel
1	1	0460468880	Basic module	
2	1	0460470883	Outlet module, GMH MMC	
3	1	0460462882	MMC GMH	
4	7	0194292020	Grommet	Ø20
5	4		Screw MRT, ground-cutter (black)	M5x12
6	2		Screw MRT (black)	M5x16
7	4		Screw MRT (black)	M5x16
12	1	0460673880	Supply cable	L = 5m

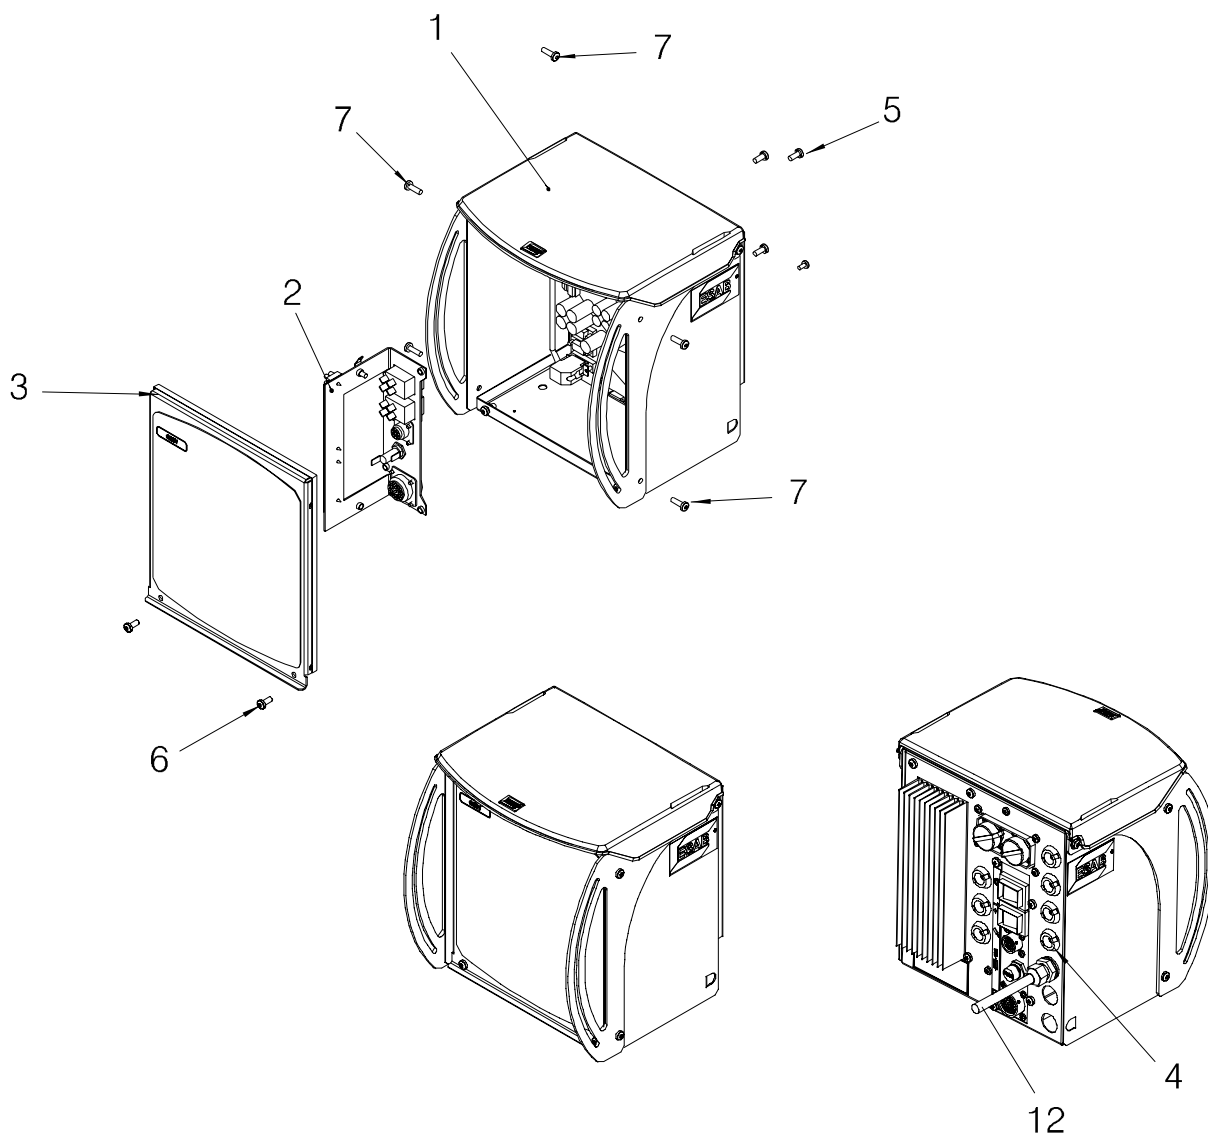 



Item no.	Qty	Ordering no.	Denomination	Notes
		0460468880	Basic module	
2	1	0458679885	Operating contact can tractor	
3	4		Screw RX-PT	6-19x8
4	6		Screw MRT ground-cutter	M5x12
5	8		Screw MRT	M4x8, DIN 7985
7	2	0460465001	Spacer for hinge	
8	2	0460463001	Protective frame	
9	1	0460430001	Cover	
10	1	0460469001	Sun visor	
12	2		Screw MRT (black)	M5x16
15	1		Circuit board module	

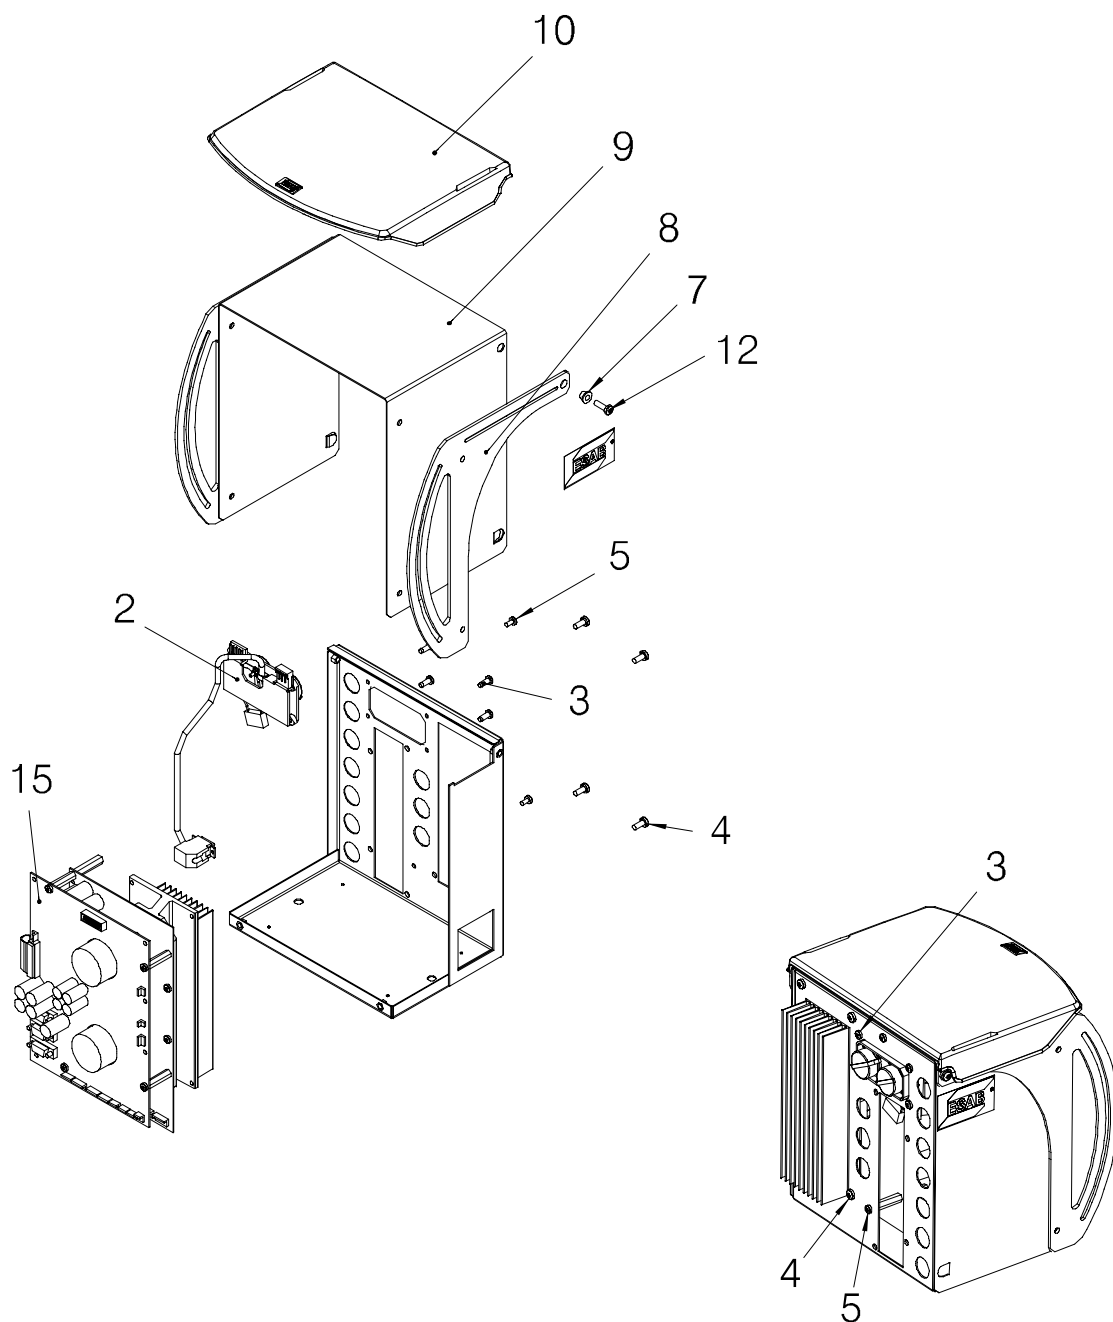 



Item no.	Qty	Ordering no.	Denomination	Notes
			Circuit board module	
1	1	0460461001	Heat sink	GMH GMH with inductive sensor
2	1	0487528880	PC board, motor drive	
3	1	0487522981	PC board, motor control	
		0487522982	PC board, motor control	
8	1	0460648880	Cable set with rectifier bridge	
9	2		Spring washer	26-pole
11	1	0193700703	Ribbon cable+connectors	

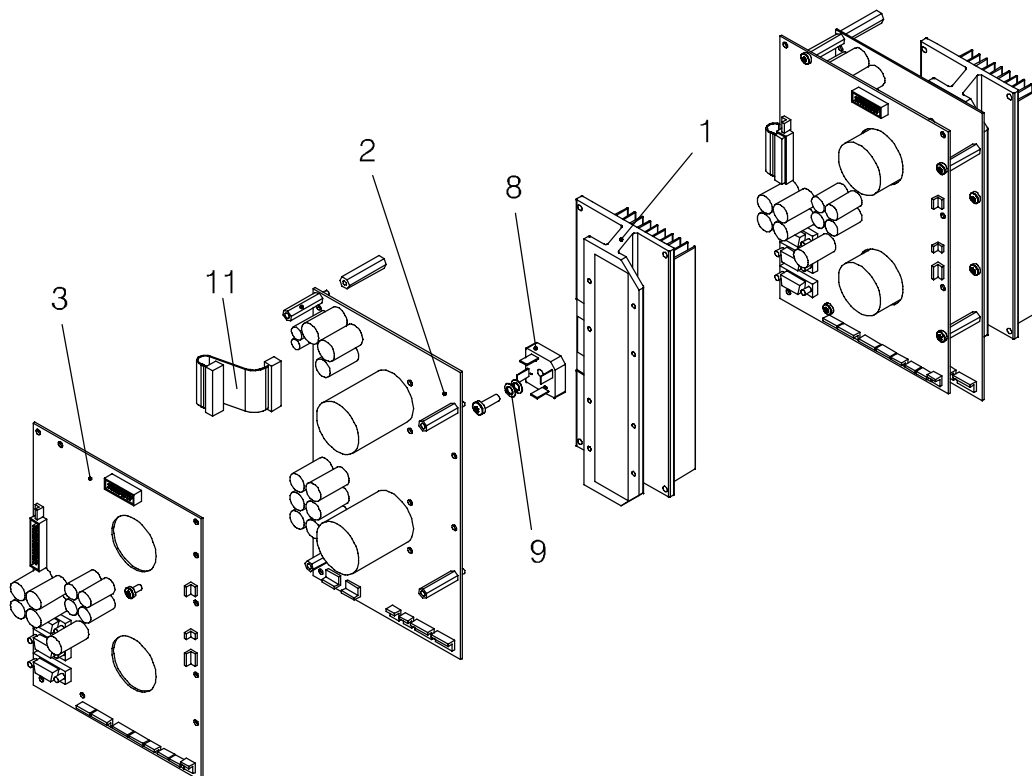 


Item no.	Qty	Ordering no.	Denomination	Notes
		0460470882	Outlet module, GMH portable control box	GMH
2	1		Screw MRT ground-cutter	M5x12
3	1		Flat pin	6,3x0,8 M6
5	4		Screw RTS	st2,9x13
6	4		Screw RX-PT	6-19x8
7	1	0193701001	Fuse holder	fine.5x12
8	1	0193701002	Fuse holder	5x20
9	1	0567900116	Fuse	10 A (Slow)
10	2	0193317001	Switch	
14	1	0460650880	Cable set with connector for joint sensor	
20	1		Cable set, GMH without MMC	
20:304	1		Sleeve socket, Burndy	23 pole
		0460470883	Outlet module, GMH MMC	GMH
2	1		Screw MRT ground-cutter	M5x12
3	1		Flat pin	6,3x0,8 M6
5	4		Screw RTS	st2,9x13
6	4		Screw RX-PT	6-19x8
7	1	0193701001	Fuse holder	fine.5x12
8	1	0193701002	Fuse holder	5x20
9	1	0567900116	Fuse	10 A (Slow)
10	2	0193317001	Switch	
14	1	0460650880	Cable set with connector for joint sensor	

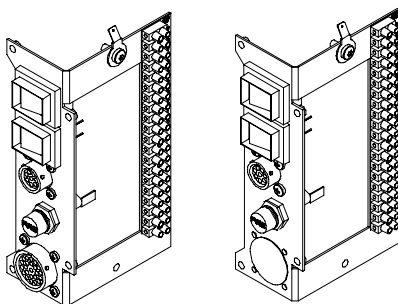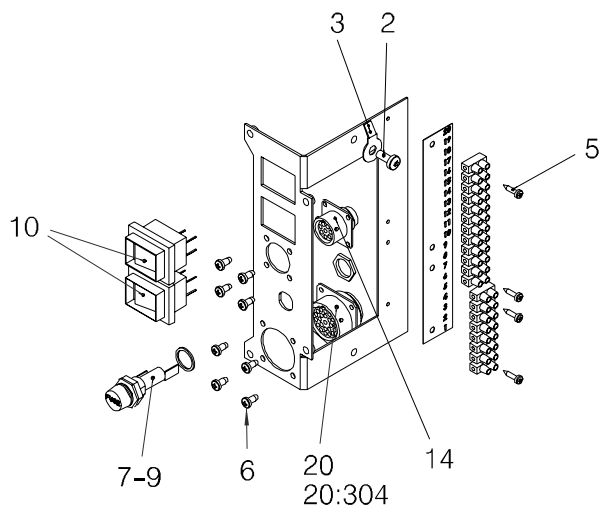  


Item no.	Qty	Ordering no.	Denomination	Notes
4	1	0194282001	LED (white)	GMH 24 V
5	1	0194282002	LED (yellow)	24 V
6	1	0194282003	LED (green)	24 V
7	1	0460600328	Knob, grey with arrow	d28-6mm
404	2	0415200020	Cable set GMH with MMC Contact block 1no+1nc	1no+1nc
405	1	0415200027	Cap orange	18x24
406	1	0415200001	Push-button	18x24
407	1	0415200047	Bulb	14V 80mA
408	1	0415200058	Splash water shield	
409	1	0460424881	Emergency stop	
410	1	0460795001	Joy-stick	
411	1	0192722004	Switch	5 settings

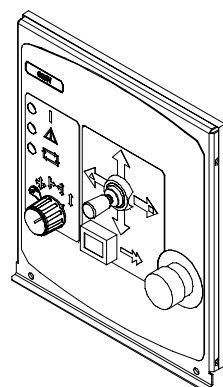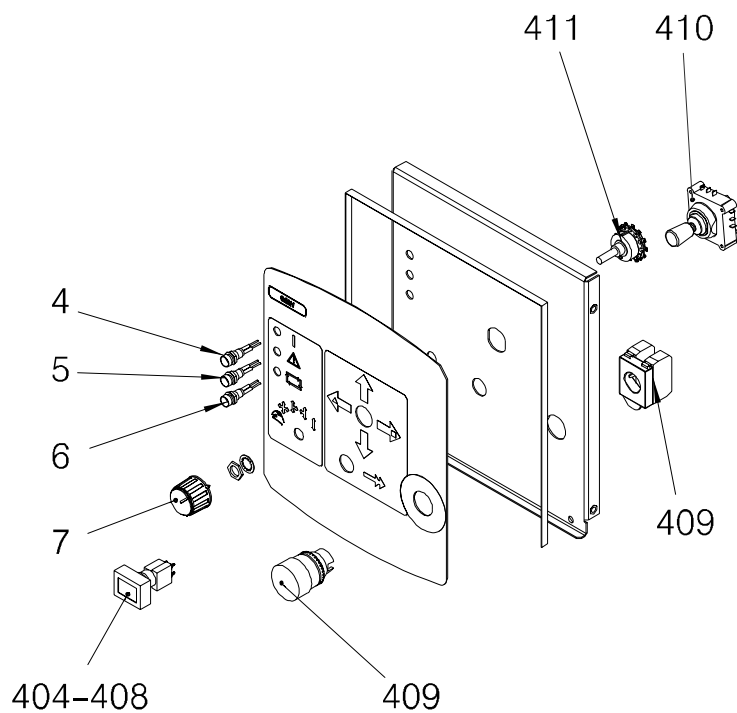  


Item no.	Qty	Ordering no.	Denomination	Notes
1	1	0460698880	GMH with portable control box	
2	1	0460503880	GMH without MMC	
3	1	0460570880	Portable control box	
4	1	0460481001	Bracket	
4	4		Screw (Black)	MRT M5x16

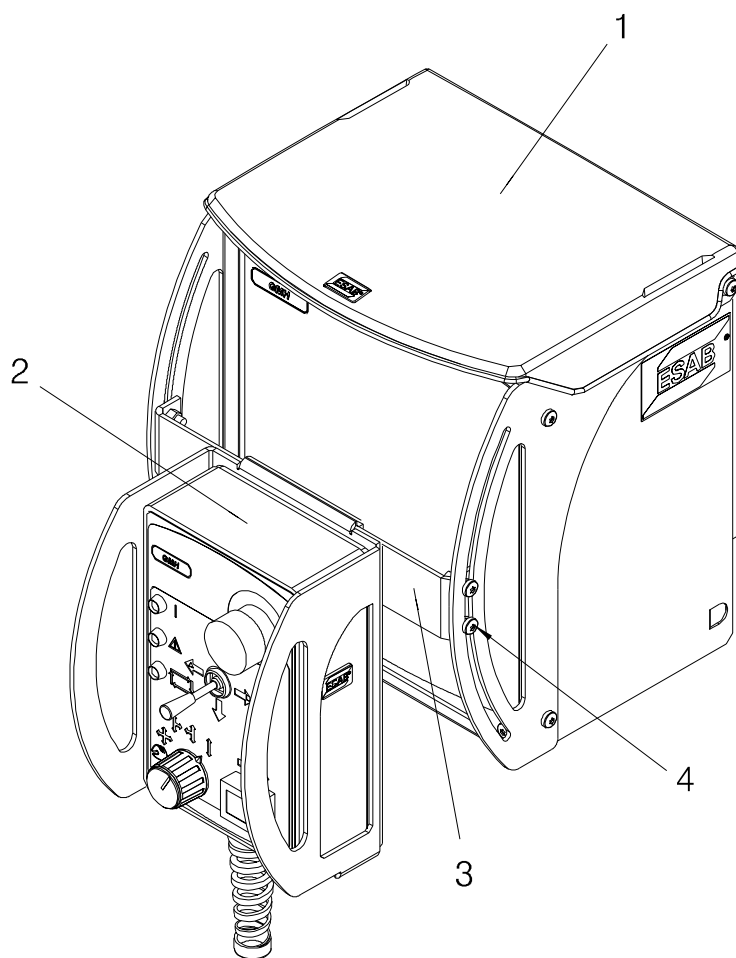 


Item no.	Qty	Ordering no.	Denomination	Notes
		0460570880	Portable control box	GMH
2	1	0194282001	LED indicator white	
3	1	0194282002	LED indicator yellow	24 V
4	1	0194282003	LED indicator green	24 V
5	1	0460424881	Emergency stop complete	
6	1	0460795001	Joy-stick	
7	1	0192722004	Switch	5 settings
10	1	0460569001	Cover	
13	1	0460600328	Knob, grey with arrow	d28-6mm
15	1	0460759880	Remote cable	4m
16	1		Nut	pr22,5
17	6		Screw	MFX-PH M4x16
20	1	0415200020	Contact block	1NO+1NC
21	1	0415200027	Cap orange	18x24
22	1	0415200001	Push button	18x24
23	1	0415200048	Bulb	28V 40mA
24	1	0415200058	Splash water shield	

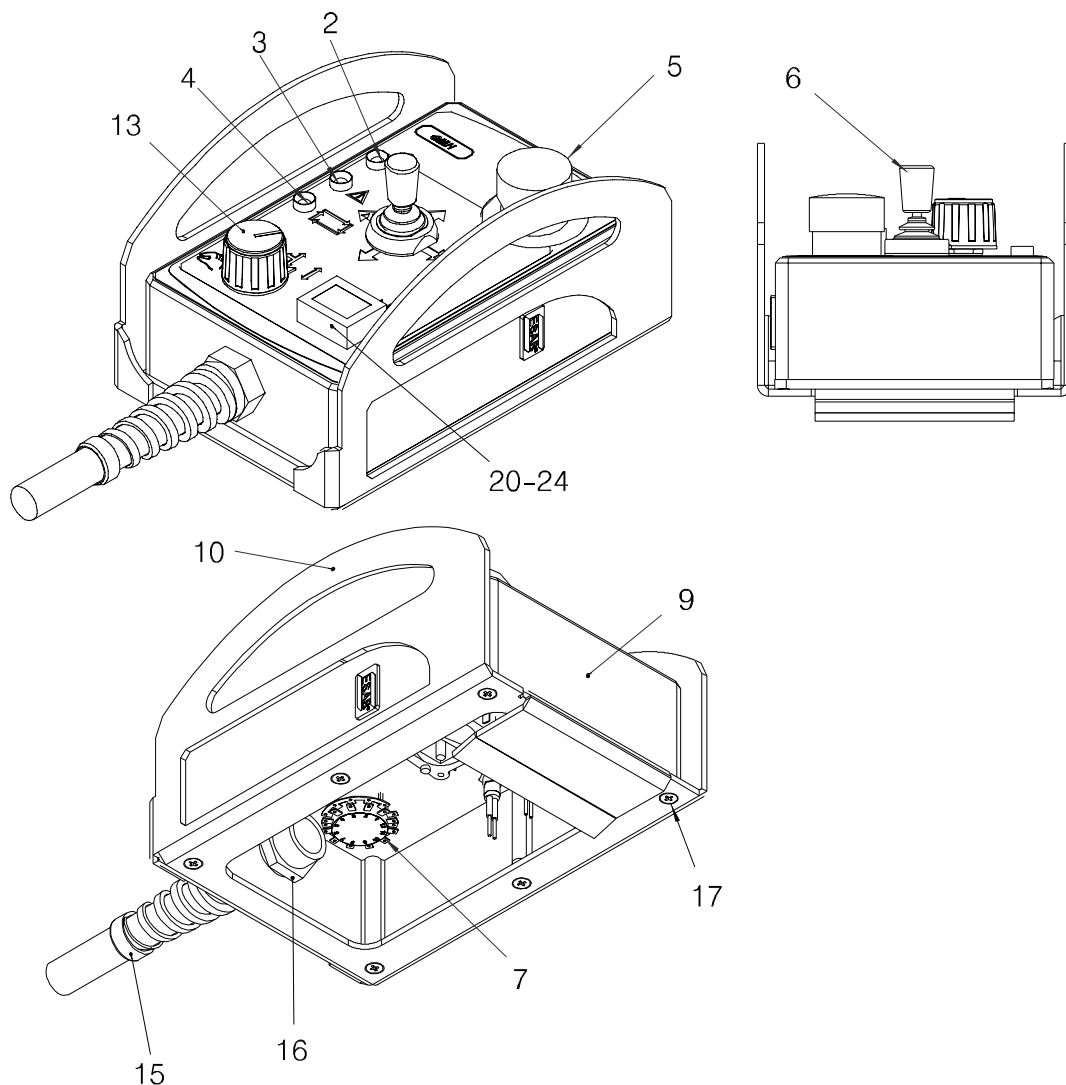 




Item no.	Qty	Ordering no.	Denomination	Notes
		0460759880	Remote cable	4m
1	4	0193963002	Cable screened	6x1,5mm2 12x0,5mm2
2	1	0193307105	Cable fitting	stp-b 16
3	1	0194200023	Cable gland with tube	23-pole
4	1	0194182023	Pin plug	23-pole
5	11	0323945001	Connector pin	rm20m-13k
6	6	0323945004	Connector pin	rm16m-23k

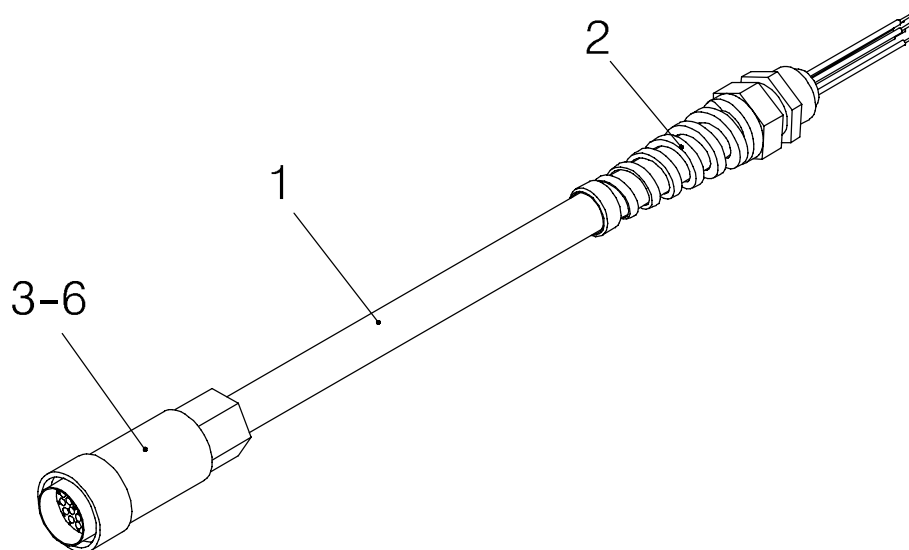 

Item no.	Qty	Ordering no.	Denomination	Notes
		041668880	Sensor	
2	1	0156106880	Joint tracking sensor	
3	1	0415836880	Diffusor	
4	1	0415739001	Insulation	t 0,125
5	1	0417258880	Sleeve	d45
6	1	0416671001	Guide arm	d18
7	1	0415328001	Yoke	
8	1	0211101049	Pin	d3x18
9	2	0193860109	Pressure pin reinforced	m8x16
11	1	0417958880	Ring with adjustable screw	
13	1	0415329001	Guide arm attachment	
15	2	0146586001	Guide finger	
21	1	0415332002	Seal	
22	1	0418090001	Pressure spring	
24	1	0412013001	Safety bellows	

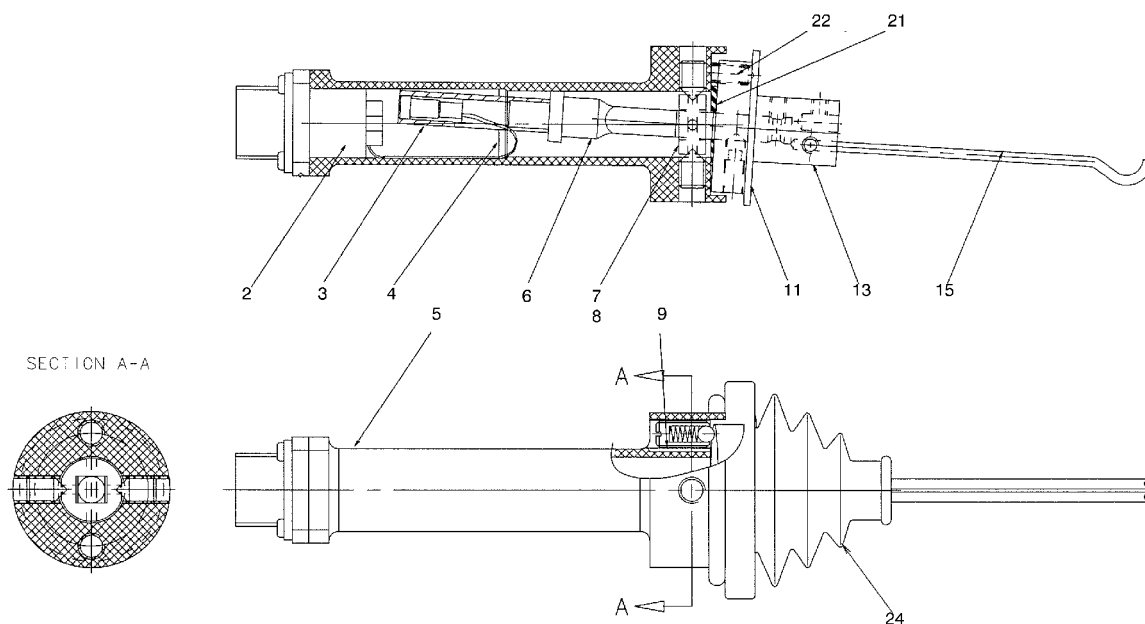 

Item no.	Qty	Ordering no.	Denomination	Notes
		0416739880	Slide cross for sensor	
6	3	0193570120	Locking lever	m6x50x63
8	1	0193570109	Locking lever	m6x16x45
10	2	0433851001	Mini slide	
13	2	0193570150	Locking lever	m6x75
18	1	0417096880	Mounting bracket	
19	1	0417097001	Clamp	
20	1	0417098880	Mounting bracket	
21	1	0417099880	Plate	
22	1	0417097002	Clamp	

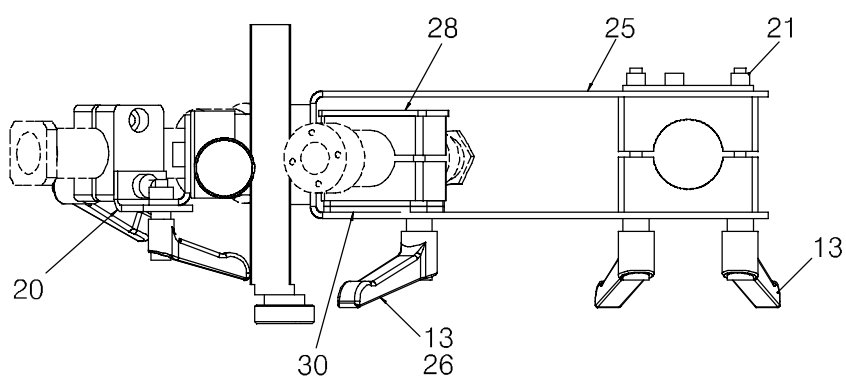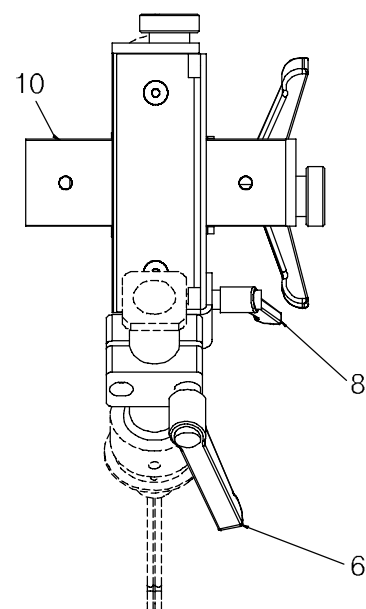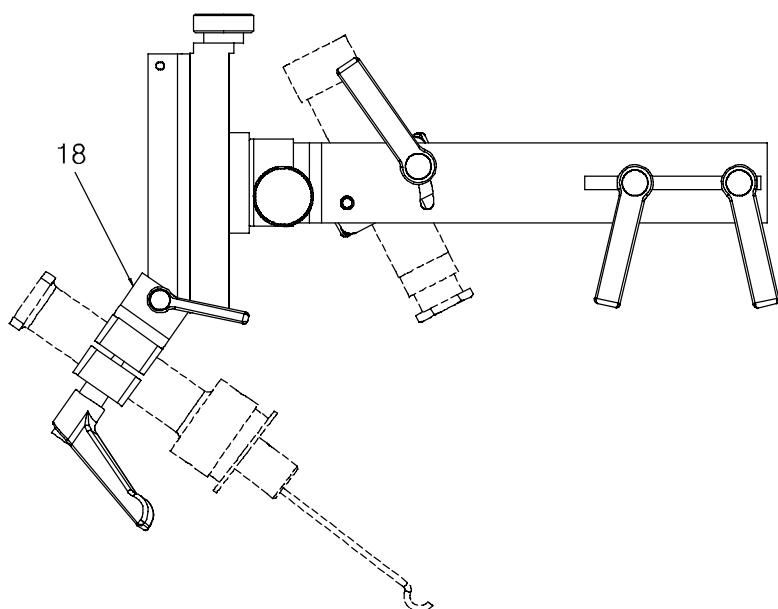   

ESAB subsidiaries and representative offices

Europe

AUSTRIA

ESAB Ges.m.b.H
Vienna-Liesing
Tel: +43 1 888 25 11
Fax: +43 1 888 25 11 85

BELGIUM

S.A. ESAB N.V.
Brussels
Tel: +32 2 745 11 00
Fax: +32 2 745 11 28

THE CZECH REPUBLIC

ESAB VAMBERK s.r.o.
Vamberk
Tel: +420 2 819 40 885
Fax: +420 2 819 40 120

DENMARK

Aktieselskabet ESAB
Herlev
Tel: +45 36 30 01 11
Fax: +45 36 30 40 03

FINLAND

ESAB Oy
Helsinki
Tel: +358 9 547 761
Fax: +358 9 547 77 71

FRANCE

ESAB France S.A.
Cergy Pontoise
Tel: +33 1 30 75 55 00
Fax: +33 1 30 75 55 24

GERMANY

ESAB GmbH
Solingen
Tel: +49 212 298 0
Fax: +49 212 298 218

GREAT BRITAIN

ESAB Group (UK) Ltd
Waltham Cross
Tel: +44 1992 76 85 15
Fax: +44 1992 71 58 03

ESAB Automation Ltd
Andover
Tel: +44 1264 33 22 33
Fax: +44 1264 33 20 74

HUNGARY

ESAB Kft
Budapest
Tel: +36 1 20 44 182
Fax: +36 1 20 44 186

ITALY

ESAB Saldatura S.p.A.
Mesero (Mi)
Tel: +39 02 97 96 81
Fax: +39 02 97 28 91 81

THE NETHERLANDS

ESAB Nederland B.V.
Amersfoort
Tel: +31 33 422 35 55
Fax: +31 33 422 35 44

NORWAY

AS ESAB
Larvik
Tel: +47 33 12 10 00
Fax: +47 33 11 52 03

POLAND

ESAB Sp.zo.o.
Katowice
Tel: +48 32 351 11 00
Fax: +48 32 351 11 20

PORTUGAL

ESAB Lda
Lisbon
Tel: +351 8 310 960
Fax: +351 1 859 1277

SLOVAKIA

ESAB Slovakia s.r.o.
Bratislava
Tel: +421 7 44 88 24 26
Fax: +421 7 44 88 87 41

SPAIN

ESAB Ibérica S.A.
Alcalá de Henares (MADRID)
Tel: +34 91 878 3600
Fax: +34 91 802 3461

SWEDEN

ESAB Sverige AB
Gothenburg
Tel: +46 31 50 95 00
Fax: +46 31 50 92 22

ESAB international AB
Gothenburg
Tel: +46 31 50 90 00
Fax: +46 31 50 93 60

SWITZERLAND

ESAB AG
Dietikon
Tel: +41 1 741 25 25
Fax: +41 1 740 30 55

North and South America

ARGENTINA

CONARCO
Buenos Aires
Tel: +54 11 4 753 4039
Fax: +54 11 4 753 6313

BRAZIL

ESAB S.A.
Contagem-MG
Tel: +55 31 2191 4333
Fax: +55 31 2191 4440

CANADA

ESAB Group Canada Inc.
Mississauga, Ontario
Tel: +1 905 670 02 20
Fax: +1 905 670 48 79

MEXICO

ESAB Mexico S.A.
Monterrey
Tel: +52 8 350 5959
Fax: +52 8 350 7554

USA

ESAB Welding & Cutting Products
Florence, SC
Tel: +1 843 669 44 11
Fax: +1 843 664 57 48

Asia/Pacific

CHINA

Shanghai ESAB A/P
Shanghai
Tel: +86 21 2326 3000
Fax: +86 21 6566 6622

INDIA

ESAB India Ltd
Calcutta
Tel: +91 33 478 45 17
Fax: +91 33 468 18 80

INDONESIA

P.T. ESABindo Pratama
Jakarta
Tel: +62 21 460 0188
Fax: +62 21 461 2929

JAPAN

ESAB Japan
Tokyo
Tel: +81 45 670 7073
Fax: +81 45 670 7001

MALAYSIA

ESAB (Malaysia) Snd Bhd
USJ
Tel: +603 8023 7835
Fax: +603 8023 0225

SINGAPORE

ESAB Asia/Pacific Pte Ltd
Singapore
Tel: +65 6861 43 22
Fax: +65 6861 31 95

SOUTH KOREA

ESAB SeAH Corporation
Kyungnam
Tel: +82 55 269 8170
Fax: +82 55 289 8864

UNITED ARAB EMIRATES

ESAB Middle East FZE
Dubai
Tel: +971 4 887 21 11
Fax: +971 4 887 22 63

Representative offices

BULGARIA

ESAB Representative Office
Sofia
Tel/Fax: +359 2 974 42 88

EGYPT

ESAB Egypt
Dokki-Cairo
Tel: +20 2 390 96 69
Fax: +20 2 393 32 13

ROMANIA

ESAB Representative Office
Bucharest
Tel/Fax: +40 1 322 36 74

RUSSIA

LLC ESAB
Moscow
Tel: +7 095 543 9281
Fax: +7 095 543 9280

LLC ESAB

St Petersburg
Tel: +7 812 336 7080
Fax: +7 812 336 7060

Distributors

For addresses and phone numbers to our distributors in other countries, please visit our home page

www.esab.com



ESAB AB
SE-695 81 LAXÅ
SWEDEN
Phone +46 584 81 000

www.esab.com

