

THERMAL DYNAMICS CUTMASTER 102

 


Manual de Piezas.


CODIGOS VALIDOS EN PERÚ

THERMAL DYNAMICS CUTMASTER 102


ITEM	DESCRIPCION	NUMERO PARTE	CODIGO
1	COVER WITH LABELS	9-0128	CONSULTAR
2	BASE ENCLOSURE ASSEMBLY	9-0186	CONSULTAR
3	TUBE, ROLL HANDLE	9-0121	619100
4	FRONT PANEL	9-0187	CONSULTAR
5	REAR PANEL	9-0101	619098

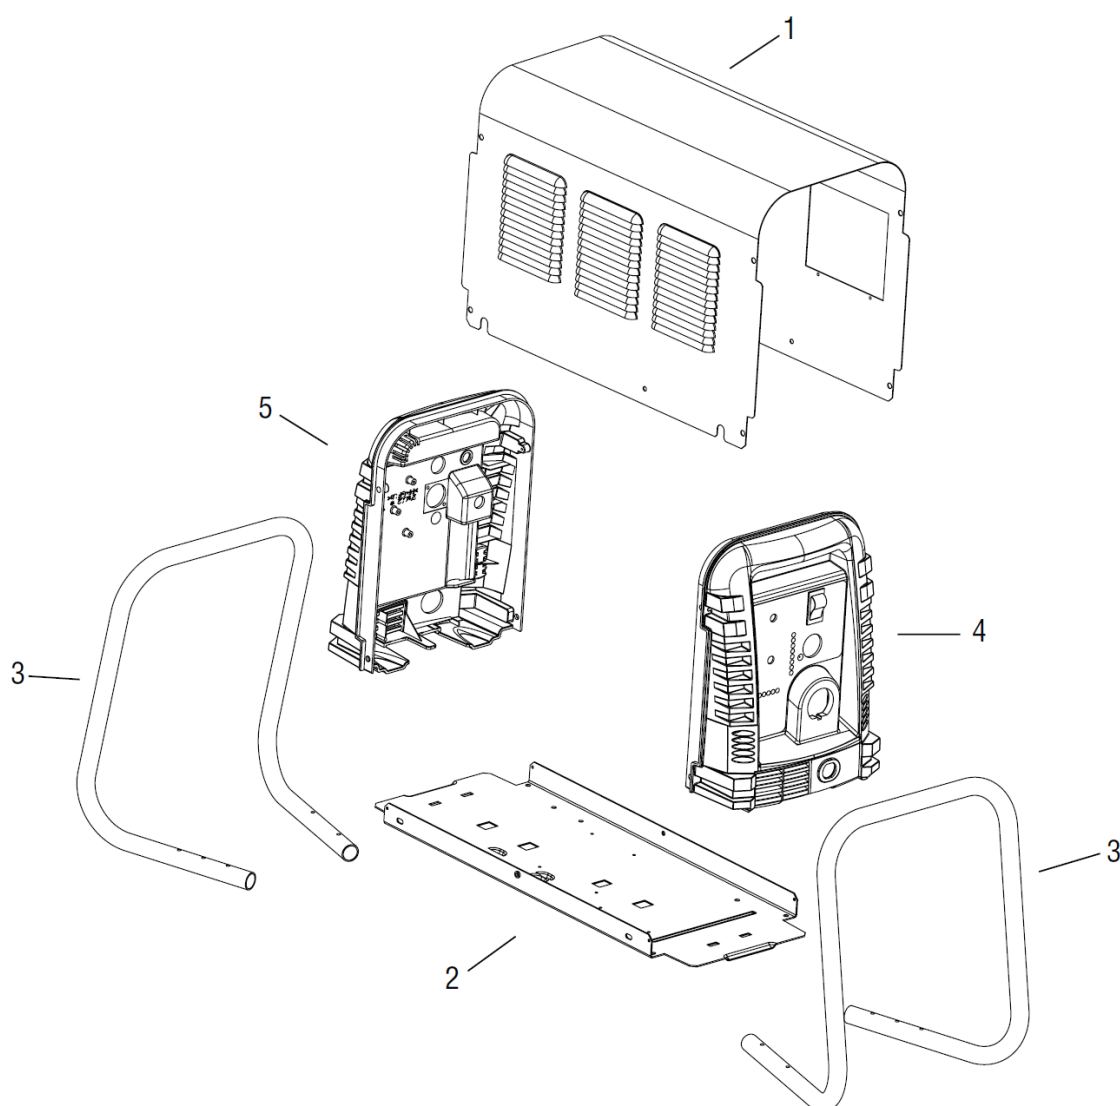

ITEM	DESCRIPCION	NUMERO PARTE	CODIGO
1	OUTPUT CURRENT CONTROL AND FUNCTION CONTROL KNOBS	9-8527	CONSULTAR
2	TOGGLE - ON/OFF SWITCH SW	9-0109	613519
3	TD WORK CABLE WITH CLAMP	9-0189	617334

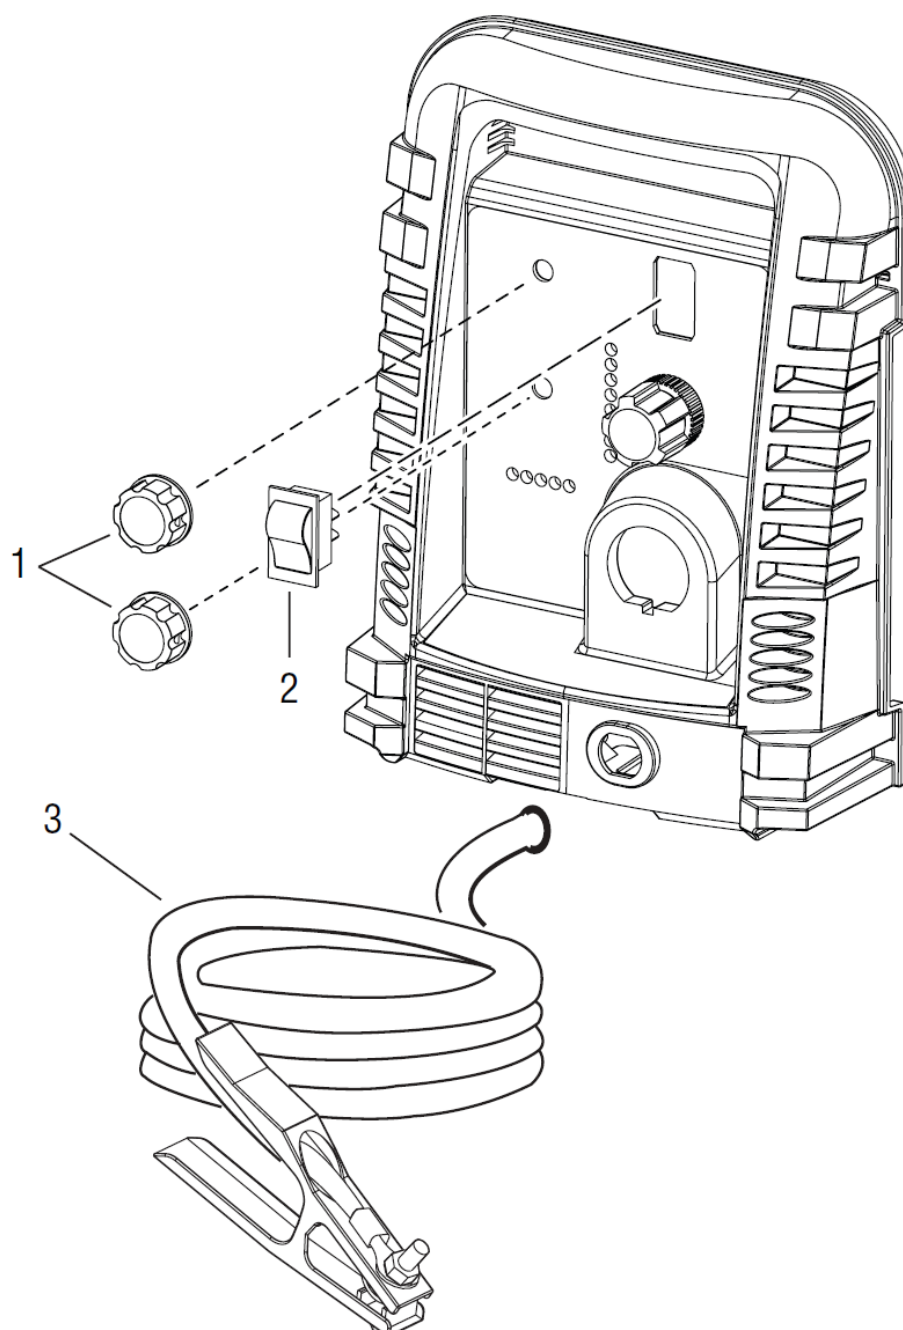 

ITEM	DESCRIPCION	NUMERO PARTE	CODIGO
1	MAIN PCB ASSEMBLY	9-0108	613190
1B	MAIN PCB ASSEMBLY 40 AMP	9-0194	613356
2	LOGIC PCB	9-0107	612995
3	CENTER CHASSIS MOLDED PLASTIC	9-0190	CONSULTAR
4	FAN	9-0104	613348
5	TRANSFORMER, MAIN	9-0106	CONSULTAR
5B	TRANSFORMER, MAIN 60 AMP	9-0196	CONSULTAR
6	INDUCTOR, OUTPUT	9-0105	616110
6B	INDUCTOR, OUTPUT 40 AMP	9-0195	CONSULTAR
----	POWER CABLE STRAIN RELIEF (NO SE MUESTRA)	9-0111	CONSULTAR
----	INPUT POWER CABLE 230 V WITH PLUG	9-0191	CONSULTAR
----	HI/LO VOLTAGE SELECTION SWITCH(NO SE MUESTRA)	9-0110	617326

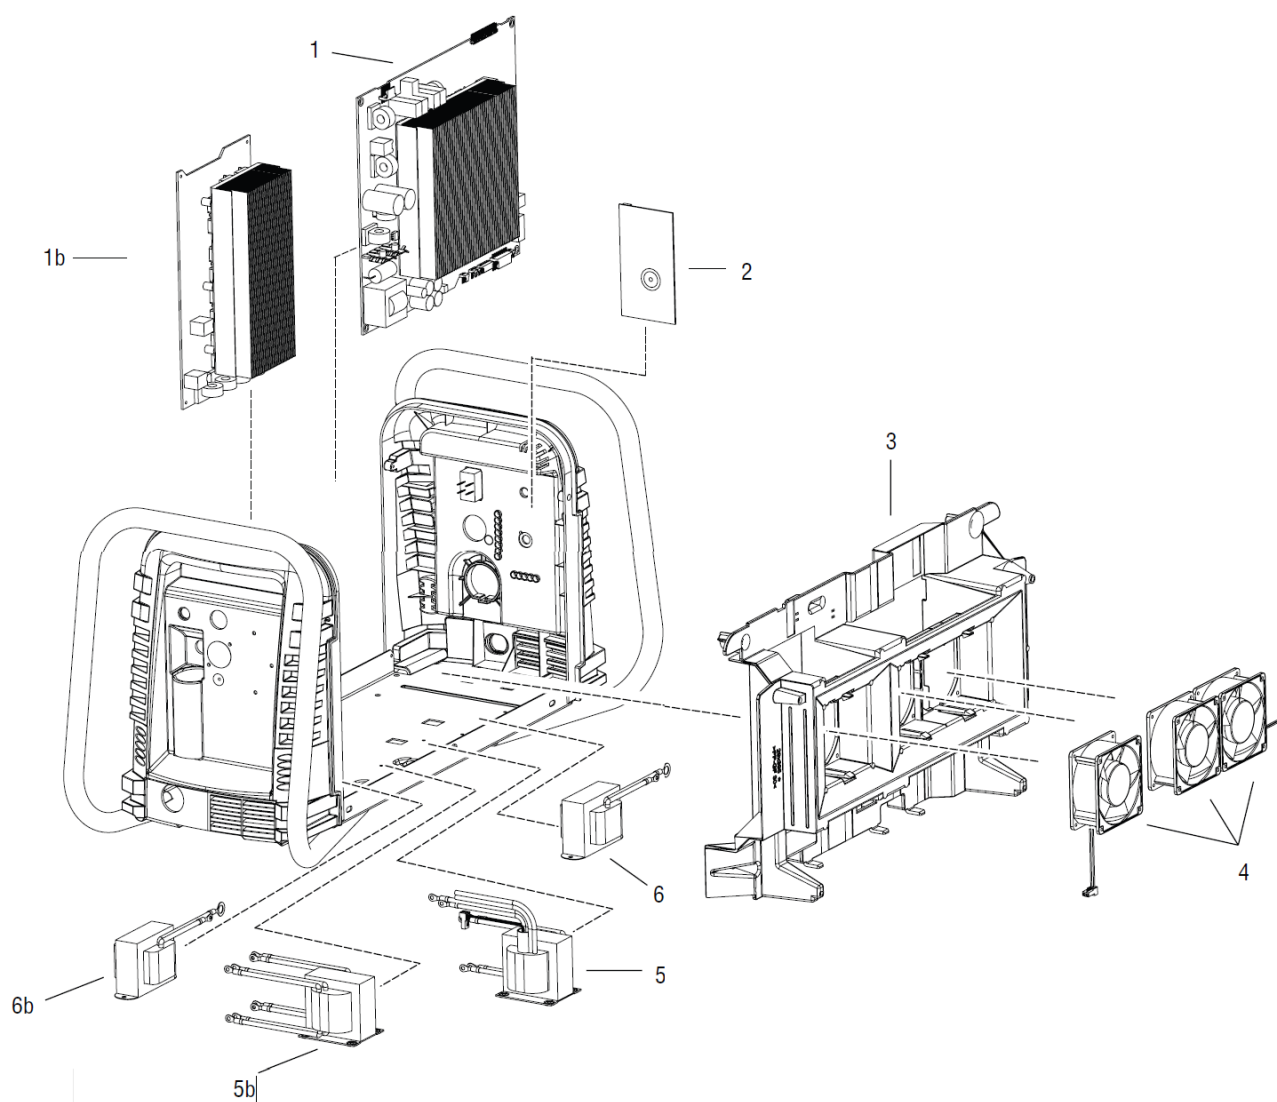 

ITEM	DESCRIPCION	NUMERO PARTE	CODIGO
1	CONTACTOR, 4 POLE	9-8587	612996
2	SOLENOID, 12V	9-0114	613353
3	SPARE PARTS BOX	7- 3267	CONSULTAR
4	SPARE PARTS BOX COVER	7- 3266	CONSULTAR
5	CONSOLE QUICK DISCONNECT	9-0161	618988
6	REGULATOR, WITH KNOB AND MOUNTING NUT	9-0115	615855
7	ASSEMBLY, PCB, INPUT CAPACITORS	9-0192	613355
8	FILTER, AUTO DRAIN	9-0116	613352
9	TD 9-0250 PRESSURE TRANSDUCER SENSATA	9-0250	613874

